



SKS Draganov Soft Touch Cheekrest Pad

Installation Instructions PART# A.5.10.2376

Advanced Technology
INTERNATIONAL

Thank you for purchasing an ATI product!



ADHESIVE PAD INSTALLATION

Point the rifle in a safe direction and place the safety in the "on" position. Next remove the magazine, pull back the bolt, and carefully inspect the chamber to be sure the rifle is unloaded.

Step #1

Begin by using the supplied alcohol swab to clean the cheekrest area on both sides of the stock.

Step #3

Continue to align the pad to the stock. Keep slight tension on the pad and bring the the pad around the surface of the stock.

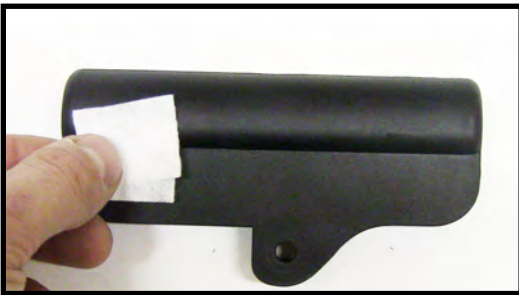


Figure 1



Figure 3

Step #2

Wait 30 minutes until the alcohol is dried. Remove the backing from the adhesive pad and align the pad to the stock.

Step #4

Use your thumb to remove any air bubbles in the pad and to firmly press and secure the adhesive pad onto the cheekrest.



Figure 2



Figure 4

Advanced Technology International • Made In the USA • Limited Lifetime Warranty
2733 West Carmen Ave • Milwaukee, WI 53209
Toll Free: 800.925.2522 • Fax: 414.464.3112

www.ATIGunstocks.com