

BEFORE YOU BEGIN INSTALLATION:
Make sure firearm is unloaded & the magazine removed.




Advanced Technology
INTERNATIONAL

SKS Featherweight Non-Swivel Bipod

Installation Instruction

1. Remove bayonet from bayonet lug
2. Place rear clamp onto yoke with pins on yoke aligning with slots on bottom of rear clamp.
3. Use thin washer with #10 x 3/4" screw to attach rear clamp to yoke as shown (center screw).
4. Press legs thru holes in yoke and use thick washer with #10 x 3/4" screws to attach legs.
5. Install bipod to barrel by sliding center post on rear clamp thru center opening of bayonet lug.
6. Clamp bipod to bayonet lug by placing the locking block (oriented as shown above) over front of lug and use #10 x 1" screw to attach to rear clamp.
7. The Bipod is now in place and ready to use.
8. To adjust legs rearward, or downward simply depress the "Snap-N-Lock" button and rotate leg to desired location. Then release the button.
9. To adjust height (inner leg) twist knurled thumbscrew 1/4 turn and legs will freely drop. Retighten thumbscrew. To retract legs simply invert the rifle and repeat process.

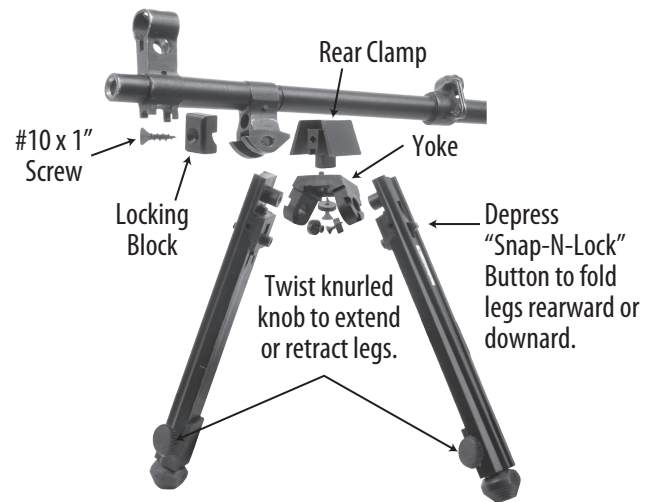

Note: Bipod does NOT swivel.

Do NOT Fire SKS with legs folded forward!

View installation videos at:
www.ATIGunstocks.com

Advanced Technology International
2733 West Carmen Avenue
Milwaukee, WI 53209 • 800.925.2522

