

GIS - Glock Scope Mount Installation Instructions

WARNING!

Make sure your Weapon is unloaded before you begin any assembly or disassembly procedures.

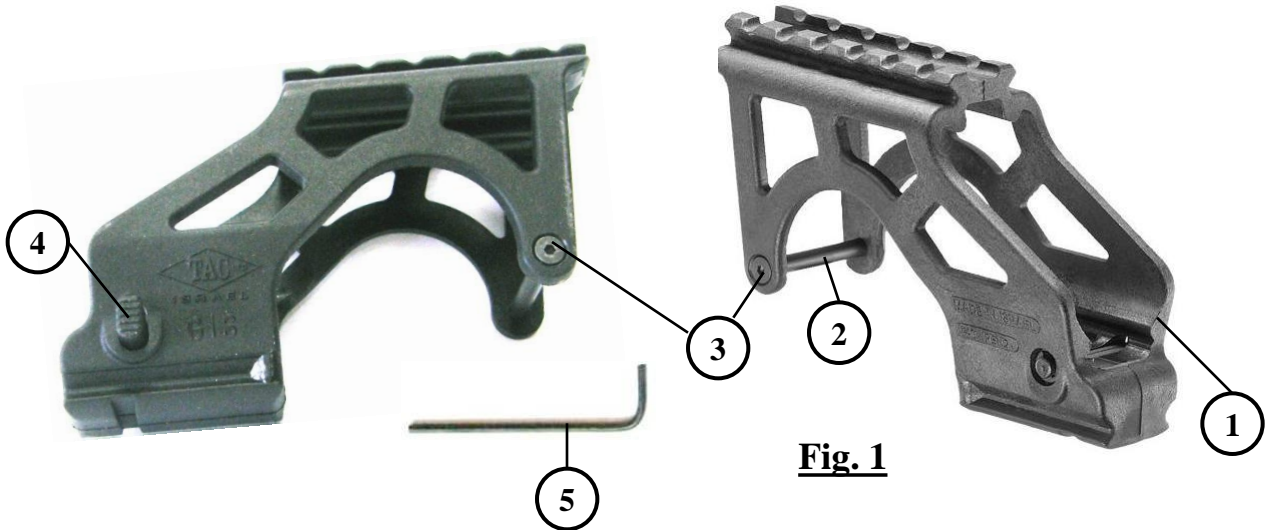


Fig. 1

Parts and Supplied Accessories (Fig 1)

1. Mount Assy
2. Trigger Pin
3. Securing Screws
4. Position Setting Bar
5. 2 mm Alen Key (attached)



Fig. 2

Step 1. Using the 2 mm Alen Key (5) remove from Your GIS the Securing Screws (3) and the Trigger Pin (2) (Fig. 2).

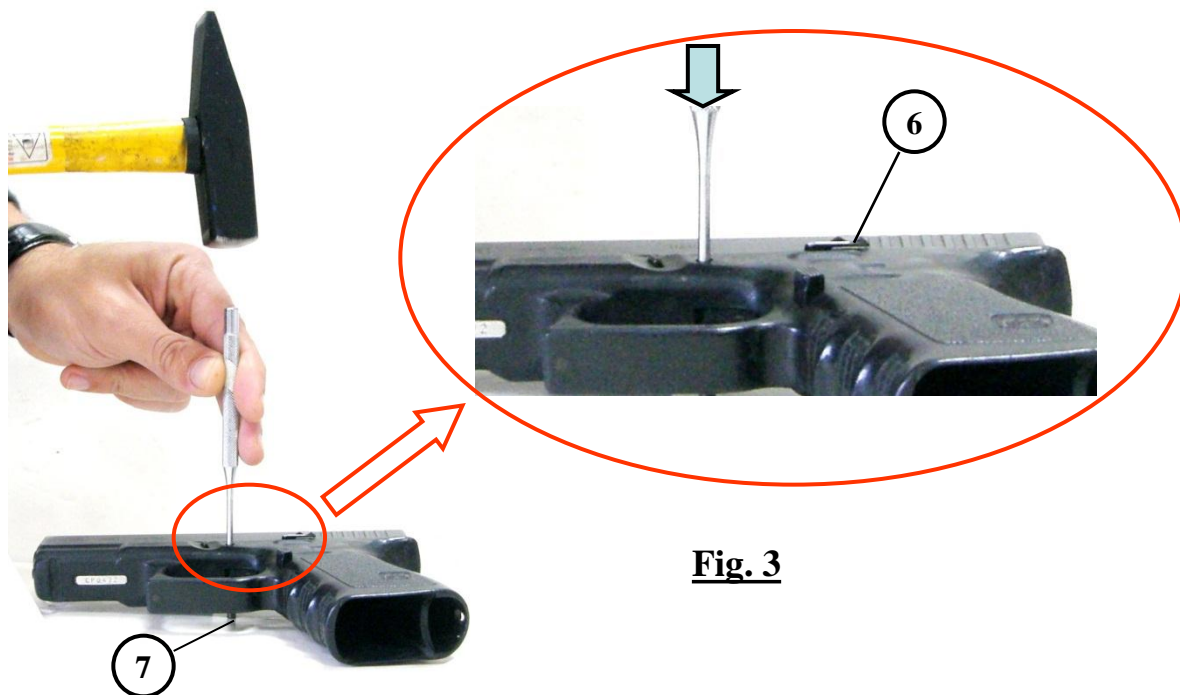


Fig. 3

Step 2. Put your Glock on the right side so that the Slide Stop Lever (6) is facing upwards. Using a 3 mm Punch push slightly the Trigger Pin (7) half way out from the Slide (Fig 3).

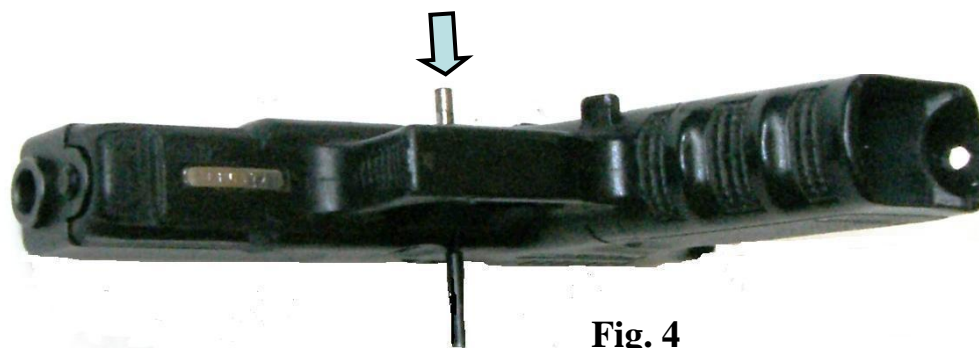


Fig. 4

Step 3. Remove the 3 mm Punch and insert instead the GIS Trigger Pin (2) (Fig. 4). Push the GIS Trigger Pin (2) until it is fully placed in the Receiver, replacing the original one.

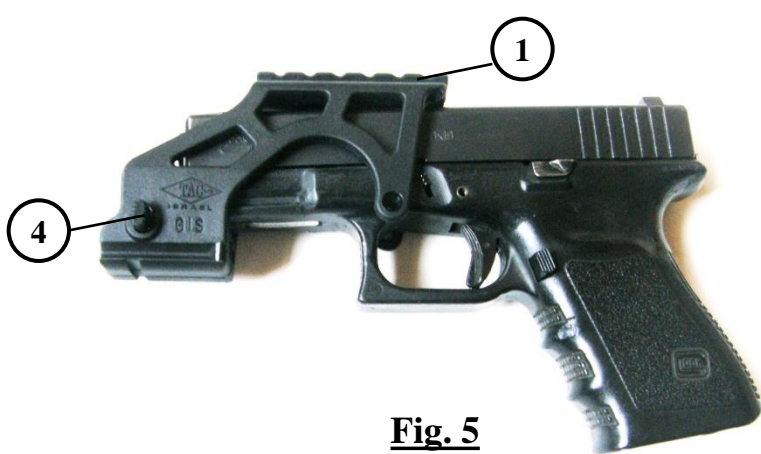


Fig. 5



Fig. 6

Step 4. Press the Position Setting Bar (4) and slip the GIS Mount (1) on the receiver (Fig. 5) until the Position Setting Bar is located in the receiver groove (Fig 6).



Fig. 7

Step 5. Using the 2 mm Allen Key (5) fasten the GIS the Securing Screws (3) to the GIS Trigger Pin (2) (Fig. 7).



Your Glock is ready for mounting Optical Sights